# Installation instructions

LAMP


AZ-GD400-HL

**MULTI-PURPOSE LID (W/DAMPER)** 

Thank you for selecting our product. Before starting installation, please read this manual thoroughly to ensure correct installation. Please keep this manual at hand for future reference.

# **ABOUT THE PRODUCT**

- Damper allows silent closing of lid.
- Side plates for anti-pinch function.

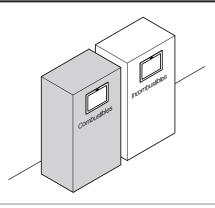

# FOR YOUR SAFE WORK AND CORRECT INSTALLATION

# Meaning of symbols



Warning Caution





Required



Caution If not followed injury or damage may result.

- The product is designed to function when installed vertically as shown below. Horizontal, slanted or upside down installation will result in improper function and may lead to injury.
- To prevent the risk of the product falling and causing injury, ensure that the lid body is securely fastened to a structure with adequate strength.
- O Do not disassemble nor modify any parts other than those described in this document.
- Recommended ambient temperature range is 0 to 40 degrees centigrade.
- The closing speed of the lid may vary according to ambient temperature .If the product is stored below zero degrees, please store in room temperature for several hours before use.

#### PARTS DESCRIPTION

Description	Quantity
Flap lid body	1
Warning sticker	1
Cover cap	4

#### **TOOLS NEEDED FOR INSTALLATION**

Screws (not provided)

Choose the suitable length according to the material to be mounted.


Recommended screw: 3mm tapping screw · · · · · 4 pcs

#### **DIMENSION DRAWING**

for installation \_ 100


# (240.5) when flap is at 90° (25.5) when flap is at 90° 450 400 087 4× \$\psi 3.5\$ holes 10, 1.5

# CUTOUT DIMENSIONS

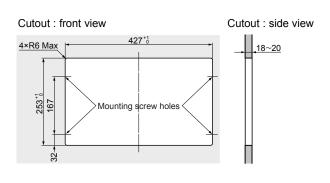


### **INSTALLATION PROCEDURE**


Make sure that the LAMP logo is at the top.

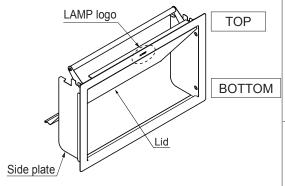

Do not leave any gap between the flap lid body and the mounting surface.

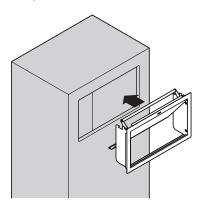


- [1] Having opened the lid, insert the screws through the provided access screw holes (two on each side) and fasten the flap lid body securely.
- [2] Make sure that the final assembly is securely fastened.

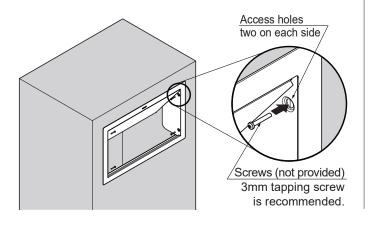

Slowly open and close the lid completely a few times in order to ensure correct operation.

5

Cover the access holes with the cover caps provided.

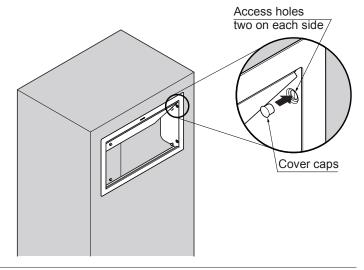

6

Paste the warning sticker in a visible position to avoid any injury when operating the lid.



SUGATSUNE KOGYO CO., LTD. Tokyo, JAPAN Phone: +81 3 3866 2260 E-mail:export@sugatsune.co.jp

SUGATSUNE KOGYO (UK) LIMITED Reading, UK Phone: +44 1189 272 955 E-mail:sales@sugatsune.co.uk

SUGATSUNE AMERICA, INC. California, USA Phone: +1 310 329 6373 E-mail:sales@sugatsune.com

Chicago, USA
Phone: +1 630 317 7072
E-mail:sales@sugatsune.com

SUGATSUNE CANADA, INC. Montreal, CANADA
Phone: +1 514 312 5267
E-mail:support@sugatsune.ca

SUGATSUNE SHANGHAI CO., LTD. Shanghai, CHINA Phone: +86 21 3632 1858 E-mail:lamp@sugatsune.com.cn

Guangzhou, CHINA Phone: +86 20 6639 3554 E-mail:lamp@sugatsune.com.cn

SUGATSUNE KOREA CO., LTD. Incheon, KOREA
Phone: +82 32 220 0603
E-mail:sales@sugatsune-korea.co.kr

SUGATSUNE KOGYO INDIA PRIVATE LIMITED Mumbai, INDIA Phone: +91 9867299597 E-mail:sales@sugatsune.in

**Delhi, INDIA** Phone: +91 9867299597 +91 11 45093636

E-mail:sales@sugatsune.in